


Check to make sure you have all parts listed prior to installation. If anything is missing contact us immediately.

(1) Hub Assembly


- (1) Male Section
- (1) Female section
- (1) Body
- (1) Body Cap
- (1) Spring - Century Spring P/N 3008
- (2) Pins - MC91595A176
- (4) M4 x 10 Socket Head Cap Screw - MC 92125A190

(11) M5 x 12 Socket Head Cap Screw - MC 91294A210

(1) S/S M5 x 12 Socket Head Cap Screw - MC 93395A304

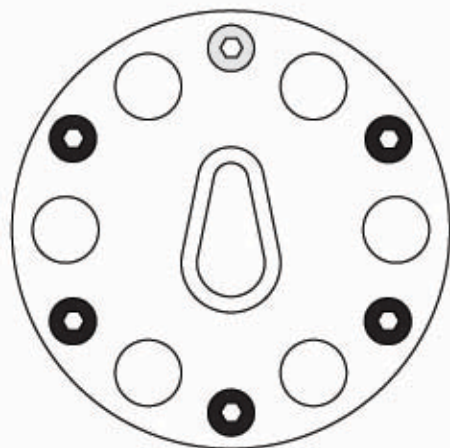

Hub adaptor (not included)

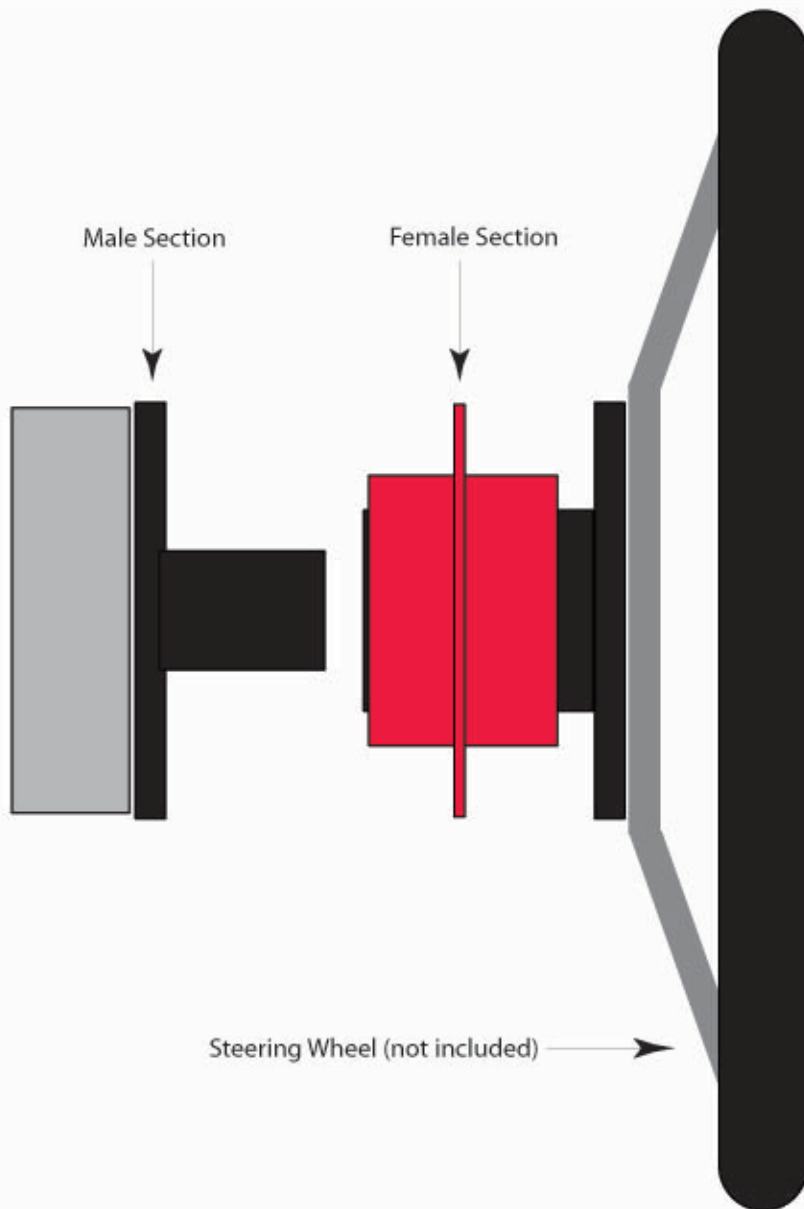

1. Mount the Male Section to the Hub Adaptor using the supplied screws. With your front wheels straight, install the silver screw at the top. This will be your top indicator when using your quick release.
2. Attach the Female Section to the Male Section
3. Mount your steering wheel to the Female Section using the supplied screws or the screws that came with your steering wheel. Make sure that the wheel is straight when mounting.
4. You installation is complete. To remove your wheel pull the female section toward the steering wheel and pull .
5. Test your quick disconnect several times to make sure it is properly engaging and disengaging.
6. Enjoy your new Rennline Product.