

Check to make sure you have all parts listed prior to installation. If anything is missing contact us immediately.

- (1) Skid Plate
- (2) Rubber Bumpers P/N -MC93945K33
- (2) 1/4-20 nuts P/N- MC95462A029
- (2) Mounting Brackets with 1/4-20 cage nuts
- (2) M12 x 90 bolts P/N MC91280A737
- (4) M12 washers P/N MC91166A290
- (2) M12 nuts P/N MC90591A181
- (2) Spacers P/N - SB67-C12
- (2) 1/4-20 x .875 S/S Button head screws P/N MC92949A541
- (2) 1/4-20 x .375 S/S Button head screws P/N MC92949A535
- (8) 1/4" S/S washers - MC92141A029




Step 1 - Remove the (2) plastic covers as shown above. These will not be reused.



Step 2 - Remove the (2) Subframe bolts on each side of the car and install the skid plate brackets as shown above. Note: Work on one side of the car at a time.



Step 3 - Install the (2) rubber standoffs as shown above. Using the supplied nuts and washer.

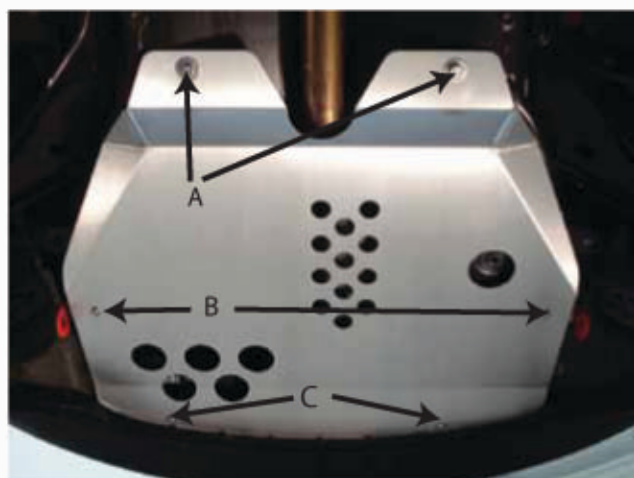

Step 4 - Install the skid plate as shown. (A) M12 bolts, Washers and Spacers. (B) 7/8" button head screws and washers (C) 3/8" button head screws and washers.